



| Position | Part No. | Qty. | Name | Type | Description | Old part No. |
|----------|----------|------|-----------------|------------|-------------|--------------|
| 1 | 65405211 | | SelfTape Screw | PT 4 x 16 | | |
| 2 | 65406201 | | motor housing | EPR 350-23 | | |
| 3 | 65405219 | | SelfTape Screw | PT 3,2 x 6 | | |
| 4 | 65405505 | | Carbon Brush | EPR 40-23 | | |
| 5 | 65405506 | | Brush Holder | EPR 40-23 | | |
| 6 | 65406202 | | Stator | EPR 350-23 | | |
| 8 | 65405224 | | Ball Bearing | 608 ZZ | | |
| 14 | 65406203 | | Rotor | EPR 350-23 | | |
| 15 | 65405226 | | Ball Bearing | 6000 ZZ | | |
| 16 | 65406204 | | oil hose | EPR 350-23 | | |
| 17 | 65405243 | | Oil Outlet | EPR 40-23 | | |
| 18 | 65406205 | | oil pump assemb | EPR 350-23 | | |
| 19 | 65406206 | | circlip | d6 | | |
| 20 | 65406207 | | gasket | 6,3x12x0,5 | | |
| 21 | 65406208 | | Protection leve | EPR 350-23 | | |
| 22 | 65406209 | | Handle | EPR 350-23 | | |
| 23 | 65406210 | | Oil tank | EPR 350-23 | | |
| 30 | 65405240 | | Oil Inlet Pipe | EPR 40-23 | | |
| 31 | 65405203 | | Power Cord | EPR 40-23 | | |
| 32 | 65405206 | | Cable Sheath | EPR 40-23 | | |
| 33 | 65406211 | | Left housing | EPR 350-23 | | |
| 34 | 65405204 | | Press Board | EPR 40-23 | | |
| 35 | 65405205 | | SelfTape Screw | PT 4 x 12 | | |
| 36 | 65405234 | | Switch | EPR 40-23 | | |
| 37 | 65406212 | | Trigger | EPR 350-23 | | |
| 38 | 65405207 | | LockOffButton | EPR 40-23 | | |
| 39 | 65406213 | | Spring | d7,5x29 | | |
| 40 | 65405233 | | Capacitor | EPR 40-23 | | |
| 41 | 65405216 | | SelfTape Screw | PT 5 x 16 | | |
| 42 | 65406214 | | Spacer | h4,5 | | |
| 43 | 65406215 | | Pinion | EPR 350-23 | | |
| 44 | 65405230 | | FlangeHead Nut | M8 | | |
| 45 | 65406216 | | Oil hose tip | EPR 350-23 | | |
| 46 | 65405232 | | O Sealing Ring | EPR 40-23 | | |
| 47 | 65406217 | | Flat gasket | d4,2x16x1 | | |
| 48 | 65406218 | | lock button | EPR 350-23 | | |
| 49 | 65406219 | | lock but spring | 65 Mn | | |
| 50 | 65406220 | | Cord clip | EPR 350-23 | | |
| 51 | 65406221 | | Brake System | EPR 350-23 | | |
| 55 | 65406222 | | connecting rod | EPR 350-23 | | |
| 56 | 65406223 | | Brake plate | EPR 350-23 | | |
| 57 | 65406224 | | Spring | d7x16 | | |
| 58 | 65406225 | | push plate | EPR 350-23 | | |

| Position | Part No. | Qty. | Name | Type | Description | Old part No. |
|----------|----------|------|-----------------|------------|-------------|--------------|
| 59 | 65406226 | | Nut | M8 | | |
| 60 | 65406227 | | big gear | EPR 350-23 | | |
| 61 | 65406228 | | Spacer | h7 | | |
| 62 | 65406229 | | Brake Spring | EPR 350-23 | | |
| 63 | 65406230 | | Output shaft | EPR 350-23 | | |
| 64 | 65405226 | | Ball Bearing | 6000 ZZ | | |
| 65 | 65406231 | | Gear cover | EPR 350-23 | | |
| 66 | 65406232 | | Right housing | EPR 350-23 | | |
| 67 | 65406233 | | Screw | ST3x12 | | |
| 68 | 65406234 | | Oil seal | EPR 350-23 | | |
| 69 | 65406235 | | Sprocket spring | EPR 350-23 | | |
| 70 | 65405249 | | Sprocket | EPR 40-23 | | |
| 71 | 65405250 | | EShape Circlip | 14 | | |
| 72 | 65406236 | | Tighten. screw | EPR 350-23 | | |
| 73 | 65406237 | | Tightening knob | EPR 350-23 | | |
| 74 | 65406238 | | Tknob cap | EPR 350-23 | | |
| 75 | 65406239 | | Screw | ST4x20 | | |
| 76 | 65406240 | | Guide plate | EPR 350-23 | | |
| 77 | 65405252 | | Buffer Board | EPR 40-23 | | |
| 81 | 65406241 | | Gasket | EPR 350-23 | | |
| 82 | 65406242 | | Sprocket hood | EPR 350-23 | | |
| 83 | 65406243 | | Positioning rin | EPR 350-23 | | |
| 84 | 65406244 | | Knob with nut | EPR 350-23 | | |
| 85 | 65405258 | | Soft Start | EPR 40-23 | | |